

C-Tronics, Inc.

PO Box 192 Ramsey, New Jersey 07446
201-818-4289 e-mail: bob@c-tronicsinc.com

FLIGHT GLOW CHARGING

Your existing glow driver charger can be used to charge the FLIGHT GLOW driver battery.

Take two alligator clip wires. Use one to clip the positive (+) terminal of the battery to the tip of the glow driver charger connector. The second clip lead is used to connect the battery negative (-) terminal to the body of the charger connector. Check the drawing below. It may be more convenient to wire the battery to a separate connector to interface to the charger.

Note that the driver battery used in the FLIGHT GLOW is a 1900 ma-hr capacity. The standard driver battery is 1300 ma-hr, so the FLIGHT GLOW battery should be charged for 50% more time to be fully charged.

